



- 4. Install knob body
- I. Pass the wire through the channel of the base align in parallel and insert the four hooks to the grooves.

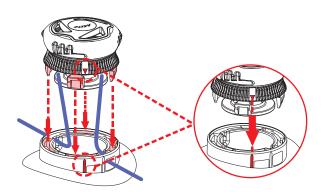


2. Turn the knob on the counterclockwise, and ensure that the arrow on the top knob and the one on the base are aligned. After you hear the "Click" sound, this means that the procedure is done.

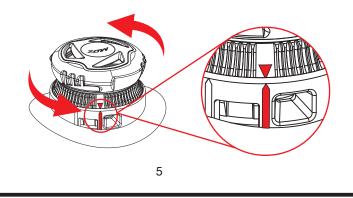

Remove ATOP knob

 1. Step 1: Take a small flat screw driver (with head 3mm, as width) and insert it at the left side of the bottom of the hook.
 Step 2: Once inserted, push inward till the end at clockwise direction.

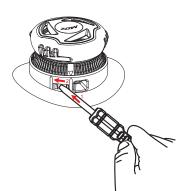

• 2. Then, the arrow on the knob will get aligned with the arrow at the bottom left side of the base.


Before

After






- 5. Function test Tightening and Loosening
- $^{\circ}$ 1. Turn the knob to clockwise direction to tighten the system

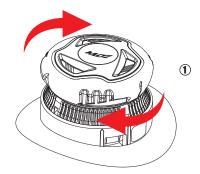

- \odot 2. Pull up the knob to release the wire, and ensure that the wire can get out from the reel easily.
- 3. Repeat this procedure 3 times to ensure that the system is working smoothly.

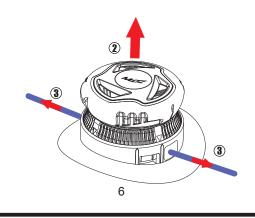

 S. Ensure this step 2 is done correctly before disassembly, as shown in red part.

